Lenco

Stereo portable CD player with cassette

SCR90

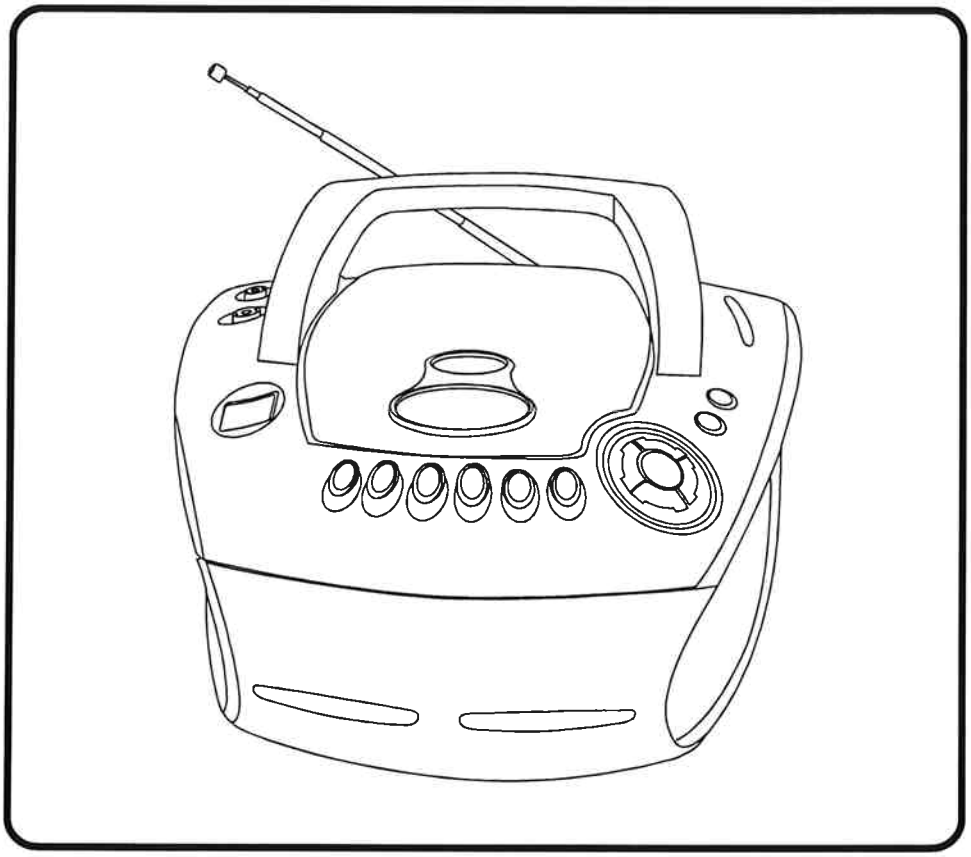

INSTRUCTION MANUAL

CE

WARNING

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL Á LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM

This product contains a low power laser device.

Warning: Do not touch the lens.
DO NOT THROW BATTERIES IN FIRE !

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

* Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
* Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
* Do not place naked flame sources, such as lighted candles on the apparatus.
* Take attention to the environmental aspects of battery disposal.
* Use the apparatus only in moderate climates (not in tropical climates).
* Do not expose the apparatus to dripping or splashing.
* Do not place objects filled with liquids, such as vases, on the apparatus.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.

The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION : To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

In case of misfunction due to electrostatic discharge the apparatus has to be reset by disconnecting it from mains supply.

CONTROLS

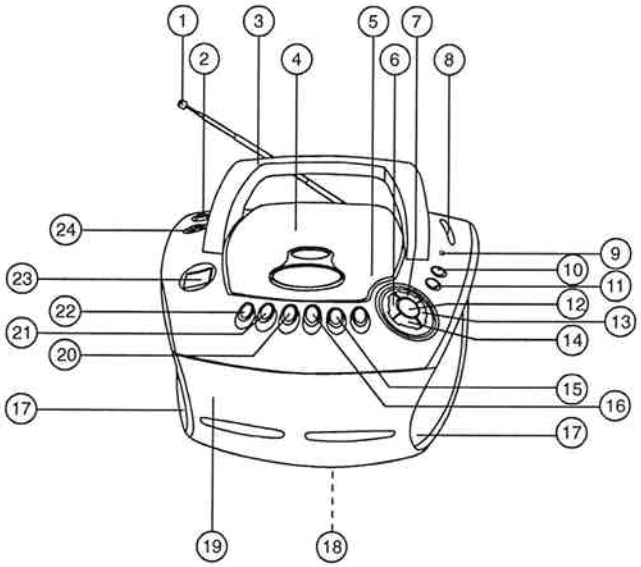

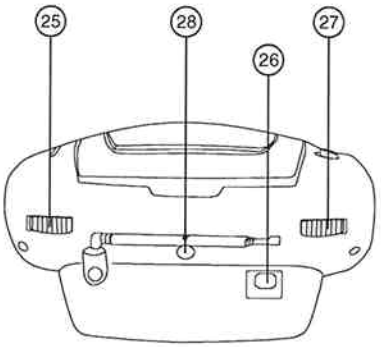

1. TELESCOPIC ANTENNA
2. MODE SWITCH
3. CARRYING HANDLE
4. CD DOOR
5. OPEN / CLOSE CD BUTTON
6. CD BACK BUTTON ⏮
7. CD PLAY / PAUSE BUTTON ⏯
8. DIAL SCALE
9. FM STEREO LED INDICATOR
10. CD PROGRAM BUTTON
11. CD REPEAT BUTTON
12. BBS SWITCH
13. CD NEXT BUTTON ⏭
14. CD STOP BUTTON ■
15. CASSETTE PLAY ◀
16. CASSETTE REWIND ▶▶
17. SPEAKER
18. BATTERY COMPARTMENT
19. CASSETTE DOOR
20. CASSETTE F.FWD ◀◀
21. CASSETTE STOP/EJECT ■ ⏏
22. CASSETTE PAUSE ❚❚
23. CD DISPLAY
24. FUNCTION SWITCH
25. TUNING CONTROL
26. AC SOCKET
27. VOLUME CONTROL
28. PHONES JACK

SCR90-LENCO-ENG-TCD06.p65 3 12/8/2005, 12:43 PM

POWER SUPPLY

USING HOUSE CURRENT
Before use, check that the rated voltage of your unit matches your local voltage.

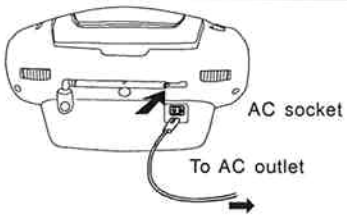

USING BATTERIES
Disconnect the AC power cord from the AC inlet of the unit. Battery power is cut automatically by the cord while it is connected.

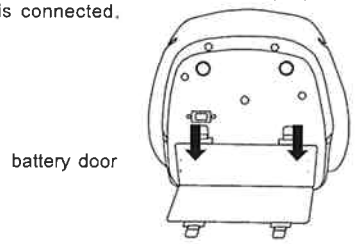

When the volume decrease, or the sound distorts, replace all of the batteries with new ones.

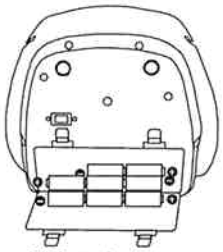

Insert 8 UM-2 (size C) batteries.

ADJUSTING THE SOUND

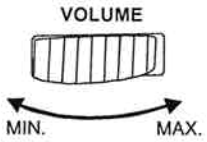

TO ADJUST THE VOLUME

FOR PRIVATE LISTENING
Plug in headphones (ø3.5 mm stereo mini-plug) to the PHONES jack.
When headphones are plugged in, the speakers are automatically disconnected.

BASS BOOST

Press the BASS BOOST button to increase or reduce the bass.

LISTENING TO THE RADIO

1 . Set to RADIO

2 . Select a MODE.

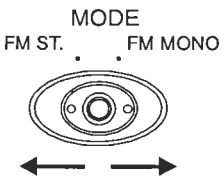

3 . Tune in to a station.

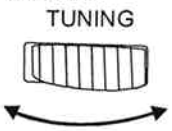

4 . Adjust the sound.

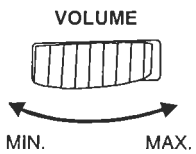

SCR90-LENCO-ENG-TCD06.p65 4 12/8/2005, 12:43 PM

FOR BETTER RECEPTION

FM

NOTE : 1. FM stereo LED indicator lights if receive FM stereo broardcast and the MODE switch set on "FM STEREO".
2. When too much noise is heard during FM STEREO reception, set MODE switch to FM mono.

AFTER LISTENING
Set the FUNCTION selector to OFF.

COMPACT DISC PLAYBACK

1. Set to CD

FUNCTION
CD

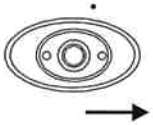

2. Open the CD door by pushing Open/ Close CD button.

3. Insert a disc with the label side facing up.
4. Close the disc holder.
The disc will rotate and the total tracks of the disc will show on the display.

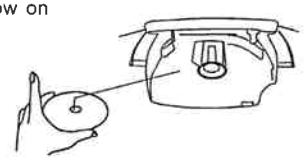

5. Press the Play/Pause ▶II button.
" PLAY ▶" & Track number " 1 " will be shown.

CD display

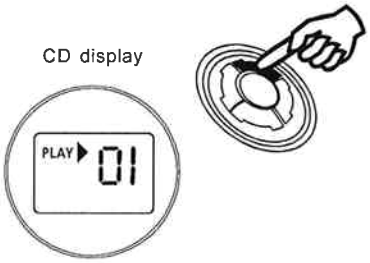

TO INTERRUPT PLAYBACK
Press the Play/Pause ▶II button and the word " PLAY ▶" will be flashed. Press the button again to resume playback.

CD display

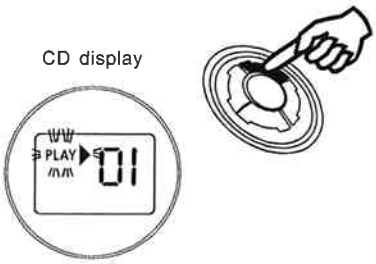

TO STOP PLAYBACK
Press the STOP button and the display shows the total tracks of the disc.

CD display

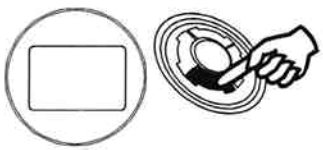

SCR90-LENCO-ENG-TCD06.p65 5 12/8/2005, 6:00 PM

TO SKIP TO THE BEGINNING OF A TRACK

- Press either one of the ⏮ ⏭ skip buttons according to the desired skip direction.
- Play/back resumes from the selected track.
- When the ⏮ button is pressed once during play, the previous track starts again.
- When the ⏭ button is pressed once during play, the next track plays.

SEARCHING FOR A PASSAGE WITHIN A TRACK

- Keep the ⏮ or ⏭ button pressed during playback, and release the button as soon as you recognise the desired passage. Then normal CD playback will resume from this point.

CD display

REPEAT PLAYBACK

This function allows a single track or all tracks on a disc to be played repeatedly.

TO REPEAT THE SAME TRACK

Press the REPEAT button once during playback, the CD display will indicate " REPEAT 1".

" REPEAT 1 "

CD display

TO REPEAT THE WHOLE DISC

Press the REPEAT button twice until " REPEAT ALL " displays.

" REPEAT ALL "

CD display

TO CANCEL REPEAT PLAYBACK FUNCTION

Press the REPEAT button again until " REPEAT 1 " or " REPEAT ALL " disappears from the display.

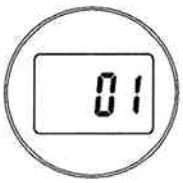

CD display

SCR90-LENCO-ENG-TCD06.p65 6 12/8/2005, 12:43 PM

PROGRAM PLAYBACK

PROGRAMMED PLAYBACK

Programmed playback enables tracks on a disc to be played in the desired order. Up to 20 tracks can be programmed.

1. Press the " PROGRAM " button.
2. Press the " F.SKIP " and " B.SKIP " buttons to select the desired track number.
3. Press " PROGRAM " button again to memorize the track.
4. Repeat steps 2 and 3 until all desired tracks are programmed.
5. Press the " PLAY/PAUSE " button to start. " PROGRAM " is flashing on the CD display.
6. Press " STOP " button to stop programmed playback.
7. Press " PROGRAM " and " PLAY/PAUSE " buttons to resume programmed playback.
8. Open the CD door or turn off the CD player to clear the programmed memory.

Note : Programming can only be made when the player is in stop mode.

" PROGRAM "

CD display

Note on CD-R/RW discs

- Because of non-standardized format definition/ production of CD-R/RW, playback quality and performance are not guaranteed.
- Manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.

TAPE PLAYBACK

1 . Set to TAPE

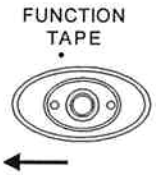

2 . Insert the cassette.

3 . Press the ◀ PLAY button.

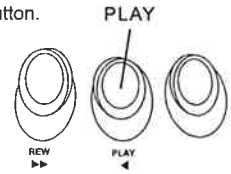

TO STOP PLAYBACK

Press the STOP / EJECT button.

TO INTERRUPT PLAYBACK

Press the PAUSE button.
To resume play, press the PAUSE button again.

TO FAST WIND

Press the REWIND or F.FWD button. Press the STOP/EJECT button to stop winding at the desired position.

SCR90-LENCO-ENG-TCD06.p65 7 12/8/2005, 6:11 PM

MAINTENANCE

CLEANING CD
If the CD skips or will not play , the disc may need cleaning . Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.

CLEANING THE TAPE HEADS
To maintain optimum sound quality, clean the playback heads (a) ,erasure head (b), pinch rollers (c), and capstans (d) regularly (every 10 hours of use). Use a cotton swab lightly moistened with cleaning fluid or denatured alcohol.

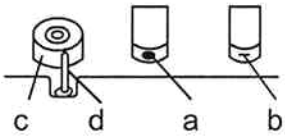

CLEANING THE CD LENS
If the CD lens is dusty, clean it with a brush-blower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.

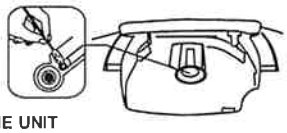

CLEANING THE UNIT
Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

IMPORTANT NOTE
If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

WARNING
Should the CD door be opened before the reading of the CD completed, a jamming noise may occur. This is resolved by closing the CD door.

SPECIFICATIONS

CASSETTE SECTION	
Track format:	2 track stereo
Erasing system:	Magnetic erase 6 poles
Tape speed:	4.75 cm / sec.
F.F. & REW time:	170 sec. (F-60 tapes)
Frequency response:	125 Hz - 8000 Hz (Normal tape)
CD SECTION	
Channels:	2 channels
S / N ratio:	60 dB
Wow & Flutter:	undetectable
Sampling frequency:	44.1 kHz 8 x over sampling
Quantization:	1 bit DA converter
Pick up light source:	Semi - conductor laser
Pick up wave length	790 nm
RADIO SECTION	
Tuning ranges:	FM 87.5 - 108 MHz
Antennas:	FM Rod antenna
GENERAL	
Output power:	1.2W + 1.2W (RMS)
Power consumption:	13W
Speaker:	3" 8 OHM
Phones jack:	3.5MM
Power source:	AC: 230V / 50Hz (INDICATED ON THE REAR OF THE UNIT) DC: 12V 1.5 x 8 UM2 / R14 / "C" SIZE
Dimensions:	290(L) x 273(D) x 163(H)mm
Weight	2.3KGS

Due to continuing improvement, the features and the design are subject to change without notice.

Where to place the item :
Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

SCR90-LENCO-ENG-TCD06.p65 8 12/8/2005, 12:43 PM